



Paragon Analytics

INORGANICS CASE NARRATIVE

Kent & Sullivan Inc.

Ross Adams

Order Number - 0405095

1. This report consists of 10 water samples.
2. The samples were received intact on 05/11/04. The temperature of the samples upon receipt ranged from 10 to 15° Celsius.
3. The samples had been correctly preserved for the requested analyses.
4. The samples were prepared for analysis based on Methods for the Chemical Analysis of Waters and Wastes (MCAWW), May 1994 procedures.
5. The samples were analyzed following MCAWW procedures for the following method:

<u>Analyte</u>	<u>Method</u>	<u>SOP #</u>
Alkalinity	310.1	1106 Rev 4
Bicarbonate	310.1	1106 Rev 4
Carbonate	310.1	1106 Rev 4

6. All standards and solutions were used within their recommended shelf life.
7. The samples were prepared and analyzed within the established hold times for all analyses.

All in house quality control procedures were followed, as described below.

8. General quality control procedures.

- A preparation (method) blank and laboratory control sample (LCS) were prepared and analyzed with the samples in this preparation batch. There were not more than 20 samples in this preparation batch.
- The method blank associated with this batch was below the reporting limit for the requested analytes. This indicates that no contaminants were introduced to the samples during preparation and analysis.
- The LCS was within the acceptance limits for these analyses.

000001

- All initial and continuing calibration blanks (ICB/CCB) associated with this analytical batch were below the reporting limit for the requested analytes.
 - All initial and continuing calibration verifications (ICV/CCV) associated with this analytical batch were within the acceptance criteria for the requested analytes. This indicates a valid calibration and stable instrument conditions.
9. Matrix specific quality control procedures.
- PA sample ID 0405095-1 was designated as the quality control sample for these analyses.
- A sample duplicate was prepared and analyzed with this batch. All guidance criteria for precision were met.
10. Sample dilutions were not required for the requested analyses.

The data contained in the following report have been reviewed and approved by the personnel listed below. In addition, Paragon Analytics certifies that the analyses reported herein are true, complete and correct within the limits of the methods employed.



Eric A. Lintner
Inorganic Analyst

6-9-04

Date



Reviewer's Initials

6/9/04

Date

00002

Paragon Analytics

Sample Number(s) Cross-Reference Table

Paragon OrderNum: 0405095

Client Name: Kent & Sullivan Inc.

Client Project Name: Ross Adams

Client Project Number:

Client PO Number:

Client Sample	Lab Sample Number	COC Number	Matrix	Date Collected	Time Collected
SW-01	0405095-1		WATER	05-May-04	16:40
SW-02	0405095-2		WATER	05-May-04	15:50
SW-04	0405095-3		WATER	04-May-04	17:52
SW-05	0405095-4		WATER	06-May-04	11:45
SW-06	0405095-5		WATER	06-May-04	8:50
SW-07	0405095-6		WATER	03-May-04	16:03
SW-08	0405095-7		WATER	03-May-04	16:59
SW-09	0405095-8		WATER	05-May-04	12:30
SW-10	0405095-9		WATER	05-May-04	14:57
SW-11	0405095-10		WATER	06-May-04	17:00
FR-01	0405095-11		WATER	06-May-04	8:00
FR-02	0405095-12		WATER	06-May-04	8:10

Chain of Custody

00004



Paragon Analytics, Inc.

225 Commerce Drive Fort Collins, CO 80524

800-443-1511 or (970) 490-1511 (970) 490-1522 Fax

Chain-of-Custody

Accession Number (LAB ID)

101050005

Page 1 of 9

Project Name / No.: Ross H. Collins

Sampler(s):

Report To: SIE Ken T
Phone: (970) 283-0947
Fax: (970) 283-0947
Company: KENT & SULLIVAN INC.
Address: 5341 N. THUNDER RD
KENNEDY AIR GOLF II

circle method or specify under comments

Sample ID	Date	Time *	Lab ID	Matrix	No. of Contaminants
SW6308 E604 E924 C CLMC	10/16/14	11:15:22	1	STL	5
SW6308 E604 E924 C CLMC	10/16/14	11:15:22	2	STL	5
SW6308 E604 E924 C CLMC	10/16/14	11:15:22	3	STL	5
SW6308 E604 E924 C CLMC	10/16/14	11:15:22	4	STL	5
SW6308 E604 E924 C CLMC	10/16/14	11:15:22	5	STL	5
SW6308 E604 E924 C CLMC	10/16/14	11:15:22	6	STL	5
SW6308 E604 E924 C CLMC	10/16/14	11:15:22	7	STL	5
SW6308 E604 E924 C CLMC	10/16/14	11:15:22	8	STL	5
SW6308 E604 E924 C CLMC	10/16/14	11:15:22	9	STL	5
SW6308 E604 E924 C CLMC	10/16/14	11:15:22	10	STL	5

Comments:

(1) Relinquished By:

Signature Ken T
Printed Name KEN T
Date 5-10-14
Time 10:00
Company Ken T & Sulli

(2) Received By:

Signature John Wolf
Printed Name John Wolf
Date 5-11-14
Time 10:45
Company Paragon Analytics

(2) Received By:

Signature Paragon Analytics
Printed Name Paragon Analytics
Date 5-11-14
Time 10:45
Company Paragon Analytics

* Time Zone (circle one): EST CST MST PST ** Indicates specific analytes under comments.

Distribution: white / yellow (Paragon); pink retained by originator.

Form 20214.xls (1/3/01)

PCBs	SW6308 E604 E924 C CLMC	OC Pesticides	SW6308 E604 E924 C CLMC	OP Pesticides	SW6308 E604 E924 C CLMC	Herbicides	SW6308 E604 E924 C CLMC	TCLP Organics	SW1331 E250B E310C E308A E151A	TCLP Metals	SW1331 E010B E200C E151A	Hexavalent Chromium	SW7196A Alkaline Digests2 Y/N	Inorganic Anions **	SW9056 E300 O	TPH	GRD DRG SW8015B (both)	TOX	SV9020B	Gross Alpha/Beta	SW9310 E930 O	Actinides by PAI SOP (circle) Pu/U/Am/Tb/Cm	Total Uranium by KPA D5174-91	Tritium	E9050	Total Alpha-Emitting Radium SW9315 E903 O	Radium 226 SW9315 E9030 Radium 228 SW9320 E904 O	Stronitum 89 D6911-95	Strontium 90 D5811-95	Gamma Isotopes **	E9011	Pb 210	Tn-132 Topic	Pb 210
------	-------------------------	---------------	-------------------------	---------------	-------------------------	------------	-------------------------	---------------	--------------------------------	-------------	--------------------------	---------------------	-------------------------------	---------------------	---------------	-----	------------------------	-----	---------	------------------	---------------	---	-------------------------------	---------	-------	---	--	-----------------------	-----------------------	-------------------	-------	--------	--------------	--------



Paragon Analytics, Inc.

225 Commerce Drive Fort Collins, CO 80524
800-443-1511 or (970) 490-1511 (970) 490-1522 Fax

Accession Number (LAB ID)

Date _____

Page 2 of 9**Chain-of-Custody**

Project Name / No.:	Sample(s):	(circle one) Turnaround: Standard or Rush (Due _____)				Dispose or Return to Client
Report To:		Date	Time *	Lab ID	Matrix	No. of Containers
circle method or specify under comments						
Report To:		5/6/04	1300	ED	Z	
Phone:		5/6/04	1300	ED	Z	
Fax:		5/6/04	1300	ED	Z	
Company:		5/6/04	1300	ED	Z	
Address:		5/6/04	1300	ED	Z	
(2)						
Comments:	(B) Hold Pending Results Pending Analysis from Samples S. 0006 0006					
Received By:	<u>Amber Shultz</u>	(1)				
Signature:	<u>Amber Shultz</u>					
Printed Name:	<u>Amber Shultz</u>					
Date:	<u>5/11/04</u>	Time	<u>10:45</u>			
Company:	<u>Paragon Analytics</u>					
Comments:	(B) Hold Pending Results Pending Analysis from Samples S. 0006 0006	(1)				
Received By:	<u>Amber Shultz</u>	(2)				
Signature:	<u>Amber Shultz</u>					
Printed Name:	<u>Amber Shultz</u>					
Date:	<u>5/11/04</u>	Time	<u>10:45</u>			
Company:	<u>Paragon Analytics</u>					
(2)						
Comments:	(B) Hold Pending Results Pending Analysis from Samples S. 0006 0006	(1)				
Received By:	<u>Amber Shultz</u>	(2)				
Signature:	<u>Amber Shultz</u>					
Printed Name:	<u>Amber Shultz</u>					
Date:	<u>5/11/04</u>	Time	<u>10:45</u>			
Company:	<u>Paragon Analytics</u>					

** Indicate specific analytes under comments.

Distribution: white / yellow (Paragon); pink retained by originator.

* Time Zone (circle one): EST CST MST PST

Form 2024.xls (1/3/01)

Paragon Analytics, Inc. -- Fort Collins, Colorado

CONDITION OF SAMPLE UPON RECEIPT FORM

CLIENT: Kent & Sullivan WORKORDER NO: 0405095
 PROJECT MANAGER: Debbie Fazio INITIALS: DW DATE: 5/12/04

1. Does this project require any special handling in addition to standard Paragon procedures?	<input checked="" type="radio"/> Yes	No	
IS PRE-SCREENING REQUIRED? (radiochemistry, DOE, etc.)		<input checked="" type="radio"/> Yes	No
2. Are custody seals on shipping containers intact? How many custody seals are provided? <u>2 each.</u>	N/A	<input checked="" type="radio"/> Yes	<input checked="" type="radio"/> No
3. Are the custody seals on sample containers intact?	<input checked="" type="radio"/> N/A	Yes	No
4. Is there a Chain-of-Custody (COC) or other representative documents, letters, or shipping memos?	<input checked="" type="radio"/> Yes	No	
5. Is the COC complete? Relinquished: Yes <input checked="" type="checkbox"/> No <input type="checkbox"/> Analyses Requested: Yes <input checked="" type="checkbox"/> No <input type="checkbox"/>	N/A	<input checked="" type="radio"/> Yes	No
6. Is the COC in agreement with the samples received? No. of Samples: Yes <input checked="" type="checkbox"/> No <input type="checkbox"/> Sample ID's: Yes <input checked="" type="checkbox"/> No <input type="checkbox"/> Matrix: Yes <input checked="" type="checkbox"/> No <input type="checkbox"/> No. of Containers: Yes <input checked="" type="checkbox"/> No <input type="checkbox"/>	N/A	<input checked="" type="radio"/> Yes	No
7. Were COC (if applicable) and sample labels legible?	<input checked="" type="radio"/> Yes	No	
8. Were airbills present and/or removable?	N/A	<input checked="" type="radio"/> Yes	No
9. Are all aqueous samples requiring chemical preservation preserved correctly (excluding volatile organics)? Are all aqueous non-preserved samples at the correct pH?	N/A	<input checked="" type="radio"/> Yes	No
10. Is there enough sample for requested analyses? If so, were samples placed in the proper containers?	<input checked="" type="radio"/> Yes	No	
11. Are all samples within holding times for the requested analyses?	<input checked="" type="radio"/> Yes	No	
12. Were all sample containers received intact? (not broken or leaking, etc.)	<input checked="" type="radio"/> Yes	No	
13. Are samples requiring no headspace (volatiles, reactive cyanide/sulfide, radon), headspace free? Size of bubble: <u>< green pea</u> ; <u>> green pea</u> (List sample IDs and affected containers on Page 2)	<input checked="" type="radio"/> N/A	Yes	No
14. Were samples checked for and free from the presence of residual chlorine?	N/A	Yes	No
15. Were the sample(s) shipped on ice?	N/A	<input checked="" type="radio"/> Yes	No
16. Were cooler temperatures measured at 0.1 - 6 °C? IR Gun Used*: <u>1</u> <input checked="" type="checkbox"/> 2 <input type="checkbox"/> N/A <input type="checkbox"/> Yes <input checked="" type="checkbox"/> No	N/A	Yes	No
17. Were all samples cooled that should have been cooled?	N/A	Yes	No

Cooler #'s 866 933 930 681 166 9 816 4
 Temperature 10° 10° 15° 10° 12° 12° 14° 11° ° C

Project Manager Signature / Date: Debbie Fazio 5/13/04

A NO RESPONSE TO ANY QUESTION EXCEPT # 1 REQUIRES THE COMPLETION OF PAGE 2 OF THIS FORM

- * IR Gun #1 (original): Raytek, SN SC-PM3/T29403
 IR Gun #2 (newer): Oakton, SN CSCIR1201

Paragon Analytics, Inc. -- Fort Collins, Colorado

CONDITION OF SAMPLE UPON RECEIPT FORM

CLIENT: Kent + Sullivan WORKORDER NO: 0405095
 PROJECT MANAGER: Debbie Fazio INITIALS: DW DATE: 5/12/04

- Custody seals broken (on outside of shipping container or on sample containers).
 No Chain-of-Custody (COC) present.
 Number of samples on the COC do not match the number of samples received.
 Aqueous samples not preserved correctly (see pH discussion below).
 SVOC samples contained residual chlorine (list sample IDs and affected containers below).
- Samples received at inappropriate temperature.
 Insufficient sample to perform requested analyses.
 Extraction or analytical holding times expired in transit.
 Broken/leaking bottles and intact bottles received in same cooler (list affected sample IDs below).
 No analyses requested.
 Incorrect sample type received.
 VOAs, reactive CN/S, radon not headspace free (list sample IDs and affected vials below).
 Airbills not present and/or removable (record applicable shipper's tracking number below).
- Other (describe below).

Describe discrepancy:

- Sample #1 - #10: 500 ml poly bottles are labeled for alkalinity analysis and were received at pH 7. Labels list preservative as HNO₃.
- Cooler #930 received with rear outside custody seal intact. Front custody seal was present but was not intact. All strapping tape was intact.
- All samples received between 10° - 15°C. Insufficient ice packed with samples. Refer to page 1 for cooler temperatures and refer to DOT ~~page~~ Survey pages for cooler contents.

Was the client contacted? No; Yes; Name Sue Kent Date/Time 5/13/04

Was the pH of any sample adjusted by the laboratory? No; Yes (see Table below):

NOTE: No pH adjustments shall be made without prior consent of Project Manager. After pH adjustment, hold metals and radchem samples ≥ 16 hr before analysis.

Sample ID	Initial pH	Final pH (wait 30 min)	Type of Reagent Used	Lot No. of Reagent Used	Initials / Date / Time

Was the laboratory directed to proceed with the analysis of any samples yielding the presence of residual chlorine? No; Yes (see notes above).

Project Manager Signature / Date: DW 5/13/04

SAMPLE LOGIN / DOT SURVEY

Client: Kent & SullivanWorkorder No: 0405095Project Manager: Debbie FazioInitials: AWDate: 5/12/04COOLER #: 866External Micro R Meter Reading (μ R/hr): 50**Paragon Sample ID:**

0405095-6-5
0405095-8-2
0405095-8-3
0405095-8-4
0405095-8-5
0405095-10-2
0405095-10-3
0405095-10-4

Client Sample ID:

SW-07
SW-09
SW-09
SW-09
SW-09
SW-11
SW-11
SW-11

Micro R Meter Reading (μ R/hr):

< background
< background

COOLER #: 933External Micro R Meter Reading (μ R/hr): 150**Paragon Sample ID:**

0405095-4-1
0405095-4-4
0405095-4-6
0405095-4-7
0405095-4-8

Client Sample ID:

SW-05
SW-05
SW-05
SW-05
SW-05

Micro R Meter Reading (μ R/hr):

< background
< background
< background
< background
< background

COOLER #: 930External Micro R Meter Reading (μ R/hr): 380**Paragon Sample ID:**

0405095-2-1
0405095-2-2
0405095-2-3
0405095-6-8
0405095-7-4
0405095-7-5
0405095-8-1
0405095-9-3
0405095-10-1

Client Sample ID:

SW-02
SW-02
SW-02
SW-07
SW-08
SW-08
SW-09
SW-10
SW-11

Micro R Meter Reading (μ R/hr):

< background
< background

If applicable, was the client contacted? YES / NO / NA Client Rep. Name: S. Kent Date/Time: 5/12/04Project Manager Signature/ Date: D. Fazio 5/12/04

SAMPLE LOGIN / DOT SURVEY

Client: Kent & Sullivan

Workorder No: 0405095

Project Manager: Debbie Fazio

Initials: AW Date: 5/12/04

COOLER #: 681

External Micro R Meter Reading (μ R/hr): 70**Paragon Sample ID:**

0405095-1-1
0405095-1-2
0405095-1-3
0405095-1-4
0405095-1-5
0405095-3-2
0405095-6-1
0405095-9-1
0405095-9-2
0405095-9-5

Client Sample ID:

SW-01
SW-01
SW-01
SW-01
SW-01
SW-04
SW-07
SW-10
SW-10
SW-10

Micro R Meter Reading (μ R/hr):

< background
< background

COOLER #: 166

External Micro R Meter Reading (μ R/hr): 60**Paragon Sample ID:**

0405095-2-4
0405095-2-5
0405095-3-1
0405095-3-3
0405095-9-4
0405095-11-1
0405095-11-2
0405095-12-1
0405095-12-2

Client Sample ID:

SW-02
SW-02
SW-04
SW-04
SW-10
FR-01
FR-01
FR-02
FR-02

Micro R Meter Reading (μ R/hr):

< background
< background

COOLER #: 9

External Micro R Meter Reading (μ R/hr): 80**Paragon Sample ID:**

0405095-3-4
0405095-3-5
0405095-4-2
0405095-4-3
0405095-4-5
0405095-5-1
0405095-5-2
0405095-5-3
0405095-5-5

Client Sample ID:

SW-04
SW-04
SW-05
SW-05
SW-05
SW-06
SW-06
SW-06
SW-06

Micro R Meter Reading (μ R/hr):

< background
< background

If applicable, was the client contacted? YES / NO / NA Client Rep. Name: D. Lutz





Date/Time: 5/13/04

Project Manager Signature/ Date: D. Lutz 5/13/04

SAMPLE LOGIN / DOT SURVEY





Client: Kent & SullivanWorkorder No: 0405095Project Manager: Debbie FazioInitials: AWDate: 5/12/04COOLER #: 816External Micro R Meter Reading (μ R/hr): 50**Paragon Sample ID:**
0405095-5-4**Client Sample ID:**
SW-06**Micro R Meter Reading (μ R/hr):**
< backgroundCOOLER #: 4External Micro R Meter Reading (μ R/hr): 100**Paragon Sample ID:**
0405095-6-2
0405095-6-3
0405095-6-4
0405095-6-6
0405095-6-7
0405095-7-1
0405095-7-2
0405095-7-3
0405095-10-5**Client Sample ID:**
SW-07
SW-07
SW-07
SW-07
SW-07
SW-08
SW-08
SW-08
SW-11**Micro R Meter Reading (μ R/hr):**
< background
< backgroundIf applicable, was the client contacted? YES / NO / NA Client Rep. Name: Skeut Date/Time: 5/13/04Project Manager Signature/ Date: D. Black

0405095

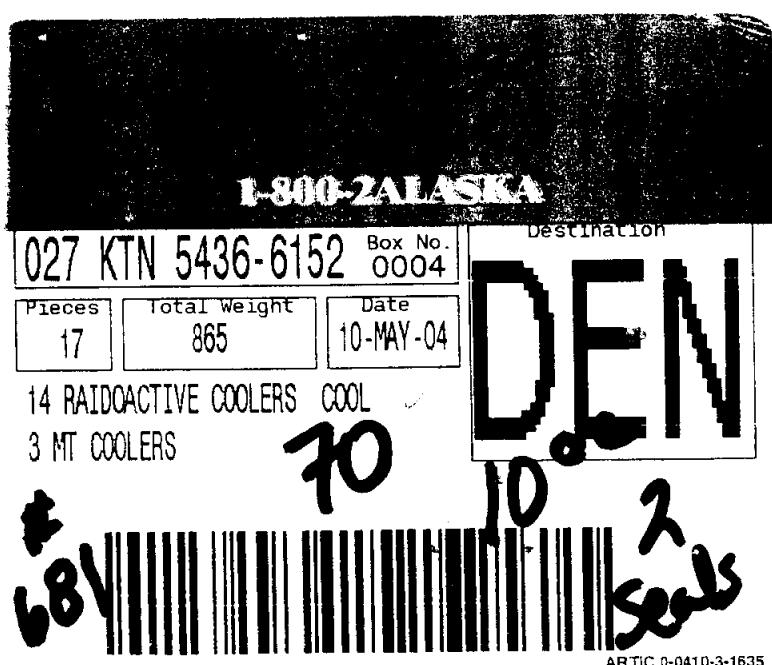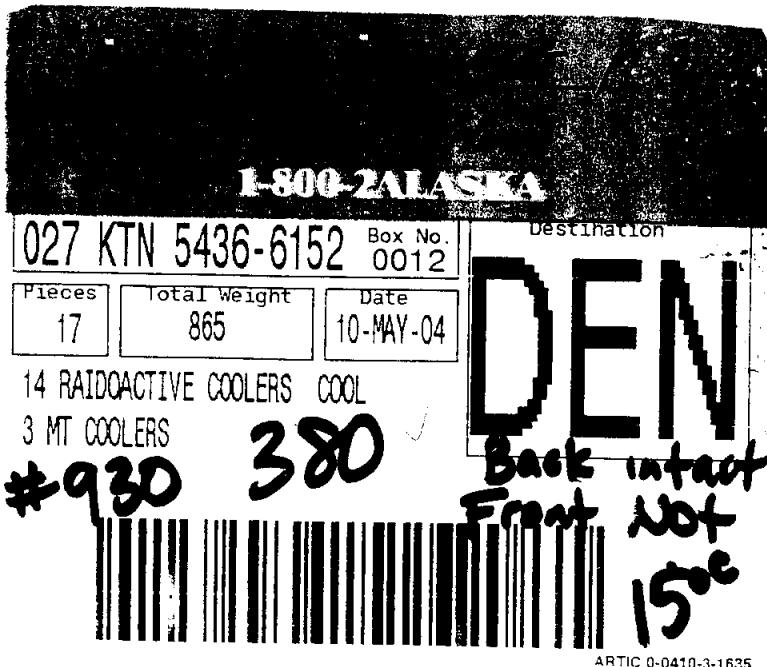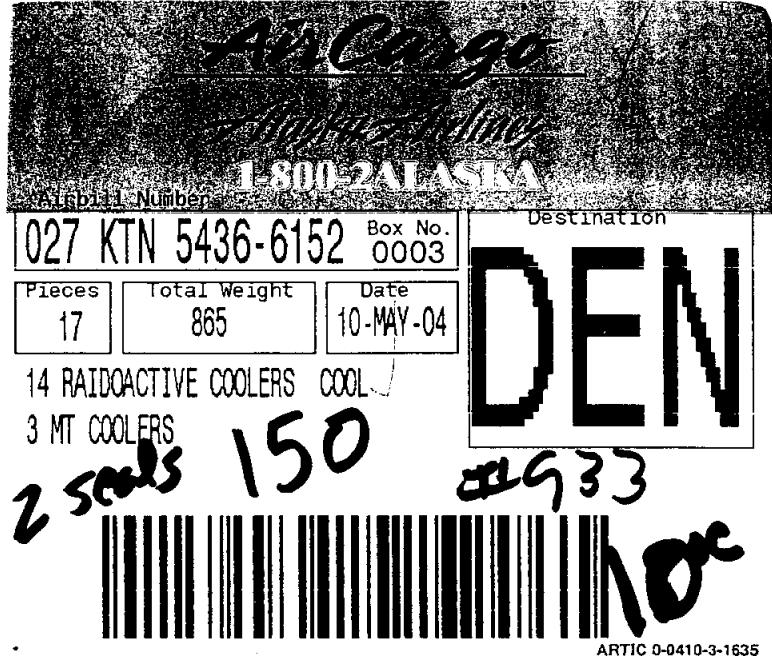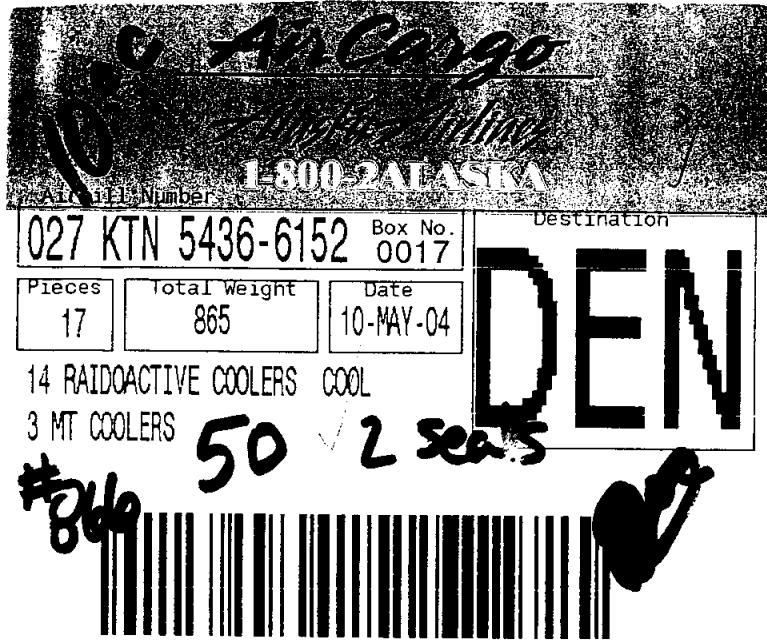

000012

04105095

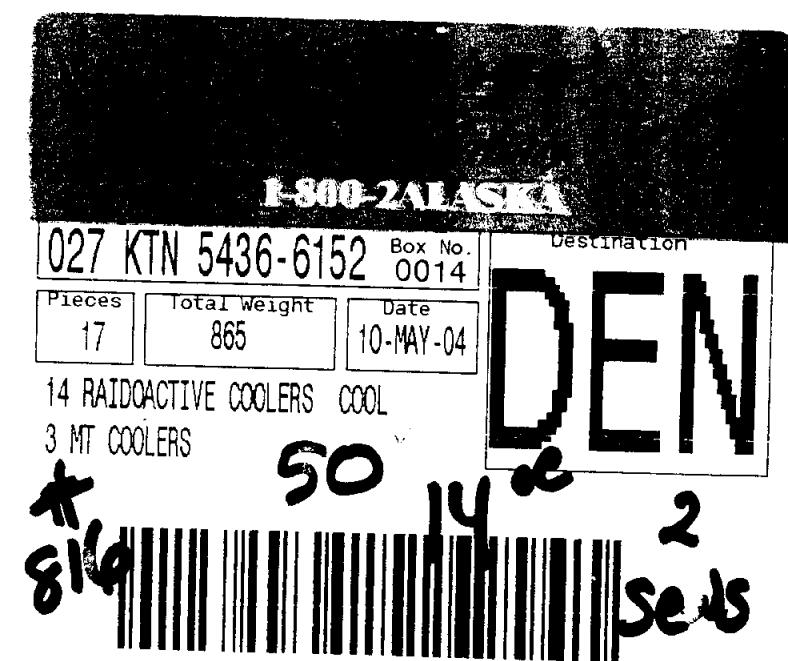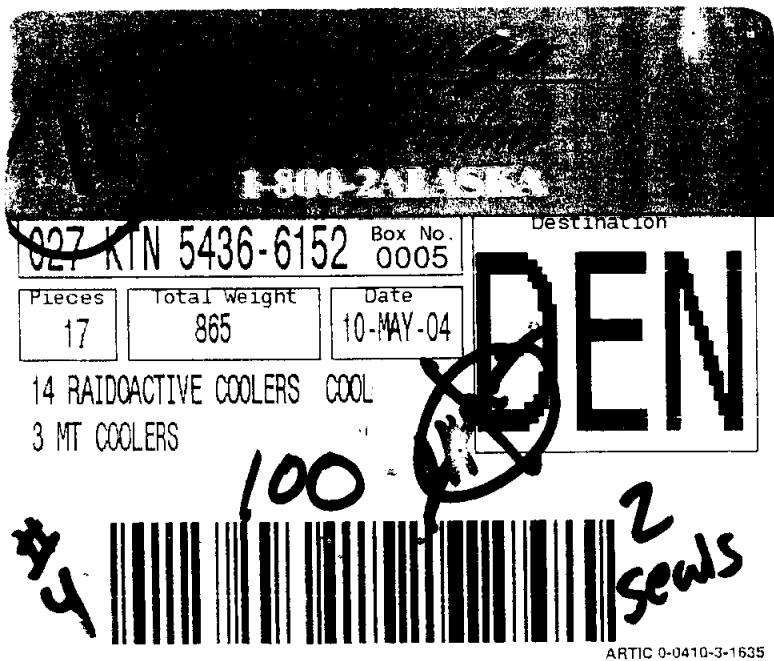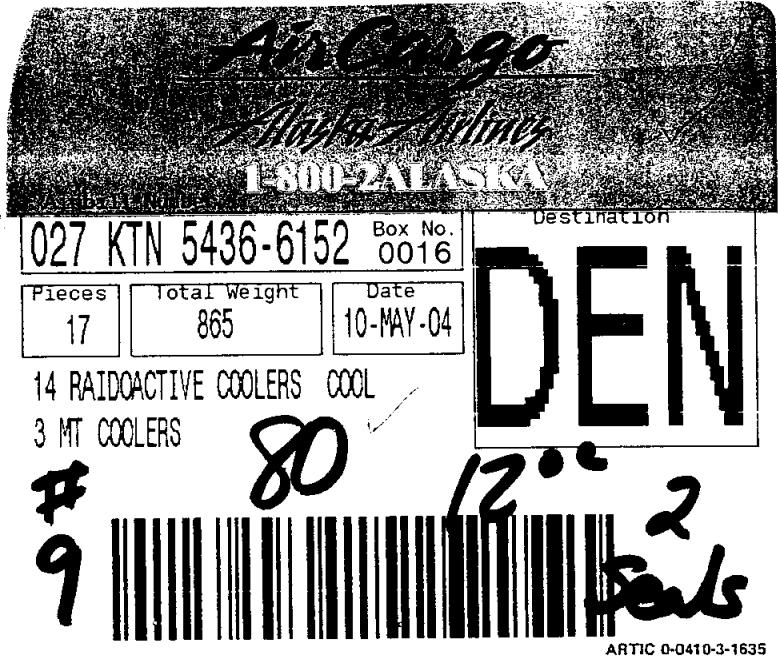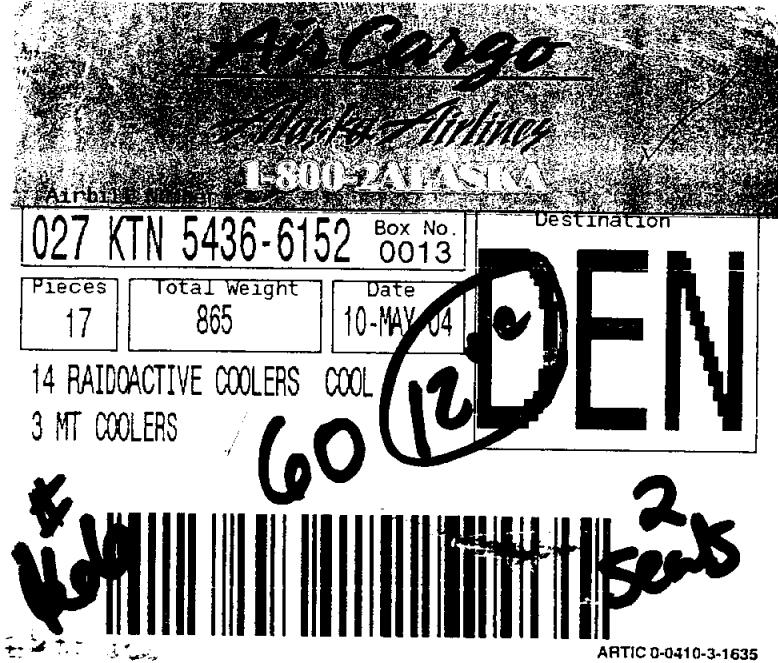

000013

Inorganic Qualifiers

Inorganic Data Reporting Qualifiers

The following qualifiers are used by the laboratory when reporting results of inorganic analyses.

- Concentration qualifier -- If the analyte was analyzed for but not detected a "U" is entered.
- QC qualifier -- Specified entries and their meanings are as follows:
 - N - Spiked sample recovery not within control limits.
 - * - Duplicate analysis (relative percent difference) not within control limits.
 - B - The method blank for the analysis contained the analyte of interest above the reporting limit.
 - Z - Calibration spike recovery not within control limits.

Sample Results

BICARBONATE AS CACO3

Method EPA310.1M

Sample Results

Lab Name: Paragon Analytics

Client Name: Kent & Sullivan Inc.

Client Project ID: Ross Adams

Work Order Number: 0405095

Final Volume: 100 ml

Reporting Basis: As Received

Matrix: WATER

Result Units: mg/l

Client Sample ID	Lab ID	Date Collected	Date Prepared	Date Analyzed	Percent Moisture	Dilution Factor	Result	Reporting Limit	Flag	Sample Aliquot
SW-01	0405095-1	05/05/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-02	0405095-2	05/05/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-04	0405095-3	05/04/2004	05/17/2004	05/17/2004	N/A	1	8.1	5		100 ml
SW-05	0405095-4	05/06/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-06	0405095-5	05/06/2004	05/17/2004	05/17/2004	N/A	1	6.9	5		100 ml
SW-07	0405095-6	05/03/2004	05/17/2004	05/17/2004	N/A	1	8.5	5		100 ml
SW-08	0405095-7	05/03/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-09	0405095-8	05/05/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-10	0405095-9	05/05/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-11	0405095-10	05/06/2004	05/17/2004	05/17/2004	N/A	1	6.9	5		100 ml

Comments:

- ND or U = Not Detected at or above the client requested detection limit.

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 1 of 3

000017

CARBONATE AS CACO3

Method EPA310.1C

Sample Results

Lab Name: Paragon Analytics

Client Name: Kent & Sullivan Inc.

Client Project ID: Ross Adams

Work Order Number: 0405095

Reporting Basis: As Received

Final Volume: 100 ml

Matrix: WATER

Result Units: mg/l

Client Sample ID	Lab ID	Date Collected	Date Prepared	Date Analyzed	Percent Moisture	Dilution Factor	Result	Reporting Limit	Flag	Sample Aliquot
SW-01	0405095-1	05/05/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-02	0405095-2	05/05/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-04	0405095-3	05/04/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-05	0405095-4	05/06/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-06	0405095-5	05/06/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-07	0405095-6	05/03/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-08	0405095-7	05/03/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-09	0405095-8	05/05/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-10	0405095-9	05/05/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-11	0405095-10	05/06/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml

Comments:

-
- ND or U = Not Detected at or above the client requested detection limit.

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

Page 2 of 3

LIMS Version: 5.028A

00018

TOTAL ALKALINITY As CaCO₃

Method EPA310.1

Sample Results

Lab Name: Paragon Analytics

Client Name: Kent & Sullivan Inc.

Client Project ID: Ross Adams

Work Order Number: 0405095

Reporting Basis: As Received

Final Volume: 100 ml

Matrix: WATER

Result Units: mg/l

Client Sample ID	Lab ID	Date Collected	Date Prepared	Date Analyzed	Percent Moisture	Dilution Factor	Result	Reporting Limit	Flag	Sample Aliquot
SW-01	0405095-1	05/05/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-02	0405095-2	05/05/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-04	0405095-3	05/04/2004	05/17/2004	05/17/2004	N/A	1	8.1	5		100 ml
SW-05	0405095-4	05/06/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-06	0405095-5	05/06/2004	05/17/2004	05/17/2004	N/A	1	6.9	5		100 ml
SW-07	0405095-6	05/03/2004	05/17/2004	05/17/2004	N/A	1	8.5	5		100 ml
SW-08	0405095-7	05/03/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-09	0405095-8	05/05/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-10	0405095-9	05/05/2004	05/17/2004	05/17/2004	N/A	1	5	5	U	100 ml
SW-11	0405095-10	05/06/2004	05/17/2004	05/17/2004	N/A	1	6.9	5		100 ml

Comments:

- ND or U = Not Detected at or above the client requested detection limit.

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 3 of 3

000019

QC and Summary Report Forms

000020

BICARBONATE AS CACO3

Method EPA310.1M

Method Blank

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Lab ID: AK040517-2MB

Sample Matrix: WATER
% Moisture: N/A

Prep Batch: AK040517-1
QCBatchID: AK040517-1-2

Run ID: AK040517-1A

Cleanup: NONE

Basis: N/A

Sample Aliquot: 100 ml
Final Volume: 100 ml
Result Units: mg/l

Lab ID	Date Prepared	Date Analyzed	Percent Moisture	Dilution Factor	Result	Reporting Limit	Flag
AK040517-2MB	5/17/04	05/17/2004	N/A	1	5	5	U

Comments:

- ND or U = Not Detected at or above the client requested detection limit.

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 1 of 3

100021

CARBONATE AS CACO3

Method EPA310.1C

Method Blank

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Lab ID: AK040517-2MB

Sample Matrix: WATER
% Moisture: N/A

Prep Batch: AK040517-1
QCBatchID: AK040517-1-2

Sample Aliquot: 100 ml
Final Volume: 100 ml
Result Units: mg/l

Run ID: AK040517-1A

Cleanup: NONE

Basis: N/A

Lab ID	Date Prepared	Date Analyzed	Percent Moisture	Dilution Factor	Result	Reporting Limit	Flag
AK040517-2MB	5/17/04	05/17/2004	N/A	1	5	5	U

Comments:

- ND or U = Not Detected at or above the client requested detection limit.

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 2 of 3

000022

TOTAL ALKALINITY As CaCO₃

Method EPA310.1

Method Blank

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Lab ID: AK040517-2MB

Sample Matrix: WATER
% Moisture: N/A

Prep Batch: AK040517-1
QCBatchID: AK040517-1-2
Run ID: AK040517-1A
Cleanup: NONE
Basis: N/A

Sample Aliquot: 100 ml
Final Volume: 100 ml
Result Units: mg/l

Lab ID	Date Prepared	Date Analyzed	Percent Moisture	Dilution Factor	Result	Reporting Limit	Flag
AK040517-2MB	5/17/04	05/17/2004	N/A	1	5	5	U

Comments:

1. ND or U = Not Detected at or above the client requested detection limit.

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 3 of 3

000023

BICARBONATE AS CACO3

Method EPA310.1M

Laboratory Control Sample

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Lab ID: AK040517-2LCS	Sample Matrix: WATER % Moisture: N/A Date Collected: N/A Date Extracted: 05/17/2004 Date Analyzed: 05/17/2004	Prep Batch: AK040517-1 QCBatchID: AK040517-1-2 Run ID: AK040517-1A Cleanup: NONE Basis: N/A	Sample Aliquot: 100 ml Final Volume: 100 ml Result Units: mg/l
-----------------------	---	---	--

CASNO	Target Analyte	Spike Added	LCS Result	Reporting Limit	Result Qualifier	LCS % Rec.	Control Limits
10-13-9	BICARBONATE AS CACO3	100	101	5		101	85 - 115

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 1 of 3

000024

CARBONATE AS CACO3

Method EPA310.1C

Laboratory Control Sample

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Lab ID: AK040517-2LCS	Sample Matrix: WATER % Moisture: N/A	Prep Batch: AK040517-1 QCBatchID: AK040517-1-2	Sample Aliquot: 100 ml Final Volume: 100 ml Result Units: mg/l
	Date Collected: N/A	Run ID: AK040517-1A	
	Date Extracted: 05/17/2004	Cleanup: NONE	
	Date Analyzed: 05/17/2004	Basis: N/A	

CASNO	Target Analyte	Spike Added	LCS Result	Reporting Limit	Result Qualifier	LCS % Rec.	Control Limits
3812-32-6	CARBONATE AS CACO3	100	101	5		101	85 - 115

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 2 of 3

000025

TOTAL ALKALINITY As CaCO₃

Method EPA310.1

Laboratory Control Sample

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Lab ID: AK040517-2LCS	Sample Matrix: WATER % Moisture: N/A	Prep Batch: AK040517-1 QCBatchID: AK040517-1-2	Sample Aliquot: 100 ml Final Volume: 100 ml Result Units: mg/l
	Date Collected: N/A	Run ID: AK040517-1A	
	Date Extracted: 05/17/2004	Cleanup: NONE	
	Date Analyzed: 05/17/2004	Basis: N/A	

CASNO	Target Analyte	Spike Added	LCS Result	Reporting Limit	Result Qualifier	LCS % Rec.	Control Limits
11-43-8	TOTAL ALKALINITY As CaCO ₃	100	101	5		101	85 - 115

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 3 of 3

00026

BICARBONATE AS CACO3

Method EPA310.1M

Duplicate Sample Results

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Reporting Basis: As Received

Sample Aliquot: 100 ml

Final Volume: 100ml

Matrix: WATER

Result Units mg/l

Client Sample ID	Lab ID	Date Prepared	Date Analyzed	Dilution Factor	Duplicate Result	Dup Qual	Sample Result	Samp Qual	Reporting Limit	RPD	RPD Limit
SW-01	0405095-1D	05/17/2004	05/17/2004	1	5	U	5	U	5	15	

Comments:

- ND or U = Not Detected at or above the client requested detection limit.

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 1 of 3

000027

CARBONATE AS CACO3

Method EPA310.1C

Duplicate Sample Results

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Reporting Basis: As Received

Sample Aliquot: 100 ml

Final Volume: 100ml

Matrix: WATER

Result Units mg/l

Client Sample ID	Lab ID	Date Prepared	Date Analyzed	Dilution Factor	Duplicate Result	Dup Qual	Sample Result	Samp Qual	Reporting Limit	RPD	RPD Limit
SW-01	0405095-1D	05/17/2004	05/17/2004	1	5	U	5	U	5		15

Comments:

- ND or U = Not Detected at or above the client requested detection limit.

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 2 of 3

000028

TOTAL ALKALINITY As CaCO₃

Method EPA310.1

Duplicate Sample Results

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Reporting Basis: As Received

Sample Aliquot: 100 ml

Final Volume: 100ml

Matrix: WATER

Result Units mg/l

Client Sample ID	Lab ID	Date Prepared	Date Analyzed	Dilution Factor	Duplicate Result	Dup Qual	Sample Result	Samp Qual	Reporting Limit	RPD	RPD Limit
SW-01	0405095-1D	05/17/2004	05/17/2004	1	5	U	5	U	5		15

Comments:

- ND or U = Not Detected at or above the client requested detection limit.

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

Page 3 of 3

LIMS Version: 5.028A

000029

BICARBONATE AS CACO3

Method EPA310.1M

Calibration Verifications

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Date Analyzed: 17-May-04

Run ID: AK040517-1A

Result Units: mg/l

Lab ID	Verification Type	Spike Added	Result	Reporting Limit	Result Qualifier	% Rec.	Control Limits
CCV1	Continuing Calibration	100	101	5	N/A	101	85 - 115
ICV	Initial Calibration	100	99.2	5	N/A	99	85 - 115

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 1 of 3

000030

CARBONATE AS CACO3

Method EPA310.1C

Calibration Verifications

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Date Analyzed: 17-May-04

Run ID: AK040517-1A

Result Units: mg/l

Lab ID	Verification Type	Spike Added	Result	Reporting Limit	Result Qualifier	% Rec.	Control Limits
CCV1	Continuing Calibration	100	101	5	N/A	101	85 - 115
ICV	Initial Calibration	100	99.2	5	N/A	99	85 - 115

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 2 of 3

00031

TOTAL ALKALINITY As CaCO₃

Method EPA310.1

Calibration Verifications

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Date Analyzed: 17-May-04

Run ID: AK040517-1A

Result Units: mg/l

Lab ID	Verification Type	Spike Added	Result	Reporting Limit	Result Qualifier	% Rec.	Control Limits
CCV1	Continuing Calibration	100	101	5	N/A	101	85 - 115
ICV	Initial Calibration	100	99.2	5	N/A	99	85 - 115

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 3 of 3

00032

BICARBONATE AS CACO3

Method EPA310.1M

Calibration Blanks

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Date Analyzed: 17-May-04

Run ID: AK040517-1A

Result Units: mg/l

Lab ID	Verification Type	Date Analyzed	Result	Reporting Limit	Flag
CCB1	Continuing Calibration	5/17/04	5	5	U
ICB	Initial Calibration	5/17/04	5	5	U

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 1 of 3

00033

CARBONATE AS CACO3

Method EPA310.1C

Calibration Blanks

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Date Analyzed: 17-May-04

Run ID: AK040517-1A

Result Units: mg/l

Lab ID	Verification Type	Date Analyzed	Result	Reporting Limit	Flag
CCB1	Continuing Calibration	5/17/04	5	5	U
ICB	Initial Calibration	5/17/04	5	5	U

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 2 of 3

00034

TOTAL ALKALINITY As CaCO₃

Method EPA310.1

Calibration Blanks

Lab Name: Paragon Analytics

Work Order Number: 0405095

Client Name: Kent & Sullivan Inc.

ClientProject ID: Ross Adams

Date Analyzed: 17-May-04

Run ID: AK040517-1A

Result Units: mg/l

Lab ID	Verification Type	Date Analyzed	Result	Reporting Limit	Flag
CCB1	Continuing Calibration	5/17/04	5	5	U
ICB	Initial Calibration	5/17/04	5	5	U

Data Package ID: AK0405095-1

Date Printed: Wednesday, June 09, 2004

Paragon Analytics

LIMS Version: 5.028A

Page 3 of 3

00035

Supporting Raw Data

Alkalinity Calculations and Quality Control Results

Prep and Analysis Date: 05/17/04

Prep and Analysis Time: 1200- 1345

Analyst: EAL

Standardization of titrant:				calc
	Std THAM conc (N):	THAM vol (mL)	HCl vol	HCl conc (N):
rep 1	0.2000	1.00	10.49	#DIV/0!
rep 2	0.2000	1.00	10.46	#DIV/0!
rep 3	0.2000	1.00	10.53	#DIV/0!
		mean =		#DIV/0!

Reagent List:	
0.020 N HCl Titrant:	R6040506-4
Phenolphthalein Indicator:	R6030610-4
Bromocresol Green Indicator:	R6040506-6
0.20 N Std. THAM:	ST031112-3
0.20 N NaCO ₃ (ICV, LCS, CCV's - 1.0 mL):	ST031112-4

total alk*
HCO₃*
CO₃*
CO₃*
OH*

ID	aliquot titrated (mL)	titrant normality N	vol to pH 8.3 (mL)	vol to pH 4.5 (mL)	total vol (mL)	mg/L as CaCO ₃		
						HCO ₃	CO ₃	OH
ICV	100	#DIV/0!	5.11	5.30	0.00	#DIV/0!	0.00	#DIV/0!
ICB	100	#DIV/0!	0	0.14	0.00	#DIV/0!	0.00	#DIV/0!
AK040517-1MB	100	#DIV/0!	0	0.14	0.00	#DIV/0!	0.00	#DIV/0!
AK040517-1LCS	100	#DIV/0!	5.12	5.35	0.00	#DIV/0!	0.00	#DIV/0!
0405072-2	10.0	#DIV/0!	0	4.62	0.00	#DIV/0!	0.00	#DIV/0!
0405072-2DUP		#DIV/0!	0	4.62	0.00	#DIV/0!	0.00	#DIV/0!
0405072-4		#DIV/0!	0	2.48	0.00	#DIV/0!	0.00	#DIV/0!
0405072-6		#DIV/0!	0	5.93	0.00	#DIV/0!	0.00	#DIV/0!
0405072-7		#DIV/0!	0	9.39	0.00	#DIV/0!	0.00	#DIV/0!
0405037-2	10.0	#DIV/0!	0	3.87	0.00	#DIV/0!	0.00	#DIV/0!
0405046-2	10.0	#DIV/0!	0	6.05	0.00	#DIV/0!	0.00	#DIV/0!
0405046-3		#DIV/0!	0	5.50	0.00	#DIV/0!	0.00	#DIV/0!
0405062-2	10.0	#DIV/0!	0	3.42	0.00	#DIV/0!	0.00	#DIV/0!
0405062-3	100	#DIV/0!	0	2.33	0.00	#DIV/0!	0.00	#DIV/0!
0405062-5	10.0	#DIV/0!	0	3.04	0.00	#DIV/0!	0.00	#DIV/0!
0405062-6		#DIV/0!	0	3.07	0.00	#DIV/0!	0.00	#DIV/0!
0405073-2	10.0	#DIV/0!	0	3.90	0.00	#DIV/0!	0.00	#DIV/0!
0405112-1	10.0	#DIV/0!	0	16.18	0.00	#DIV/0!	0.00	#DIV/0!
0405112-2	10.0	#DIV/0!	0.20	3.25	0.00	#DIV/0!	0.00	#DIV/0!
0405112-3	5.0	#DIV/0!	0.33	11.09	0.00	#DIV/0!	0.00	#DIV/0!
0405112-4	5.0	#DIV/0!	0	13.29	0.00	#DIV/0!	0.00	#DIV/0!
0405112-5		#DIV/0!	0	3.37	0.00	#DIV/0!	0.00	#DIV/0!
CCV	100	#DIV/0!	5.21	5.38	0.00	#DIV/0!	0.00	#DIV/0!
CCB	100	#DIV/0!	0	0.22	0.00	#DIV/0!	0.00	#DIV/0!
0405112-6	5.0	#DIV/0!	0	4.70	0.00	#DIV/0!	0.00	#DIV/0!
0405112-7	5.0	#DIV/0!	0	4.69	0.00	#DIV/0!	0.00	#DIV/0!
0405112-8	5.0	#DIV/0!	0.15	12.76	0.00	#DIV/0!	0.00	#DIV/0!
AK040517-1MB	100	#DIV/0!	0	0.23	0.00	#DIV/0!	0.00	#DIV/0!
AK040517-1LCS	100	#DIV/0!	5.22	5.38	0.00	#DIV/0!	0.00	#DIV/0!
0405095-1	100	#DIV/0!	0	0.27	0.00	#DIV/0!	0.00	#DIV/0!
0405095-1DUP		#DIV/0!	0	0.31	0.00	#DIV/0!	0.00	#DIV/0!
0405095-2		#DIV/0!	0	0.31	0.00	#DIV/0!	0.00	#DIV/0!
0405095-3		#DIV/0!	0	0.85	0.00	#DIV/0!	0.00	#DIV/0!
0405095-4		#DIV/0!	0	0.25	0.00	#DIV/0!	0.00	#DIV/0!
0405095-5		#DIV/0!	0	0.72	0.00	#DIV/0!	0.00	#DIV/0!
0405095-6		#DIV/0!	0	0.89	0.00	#DIV/0!	0.00	#DIV/0!
0405095-7		#DIV/0!	0	0.41	0.00	#DIV/0!	0.00	#DIV/0!
0405095-8		#DIV/0!	0	0.29	0.00	#DIV/0!	0.00	#DIV/0!
0405095-9		#DIV/0!	0	0.31	0.00	#DIV/0!	0.00	#DIV/0!
0405095-10		#DIV/0!	0	0.72	0.00	#DIV/0!	0.00	#DIV/0!

ND = Not Detected

DNR = Do Not Report

7/17/04

5/19/04 U00037

